

Sunbeam®



easy track™ litter box

Includes odor filter and drawstring bag



Rake it

ONE MOTION
makes cleaning fast and easy



Seal it

ZEOLITE FILTER
traps unpleasant odors
while waste is sealed away



Throw it away


DRAWSTRING BAG
eliminates messy cleanup



instruction manual

product overview

Litter box shown in home position

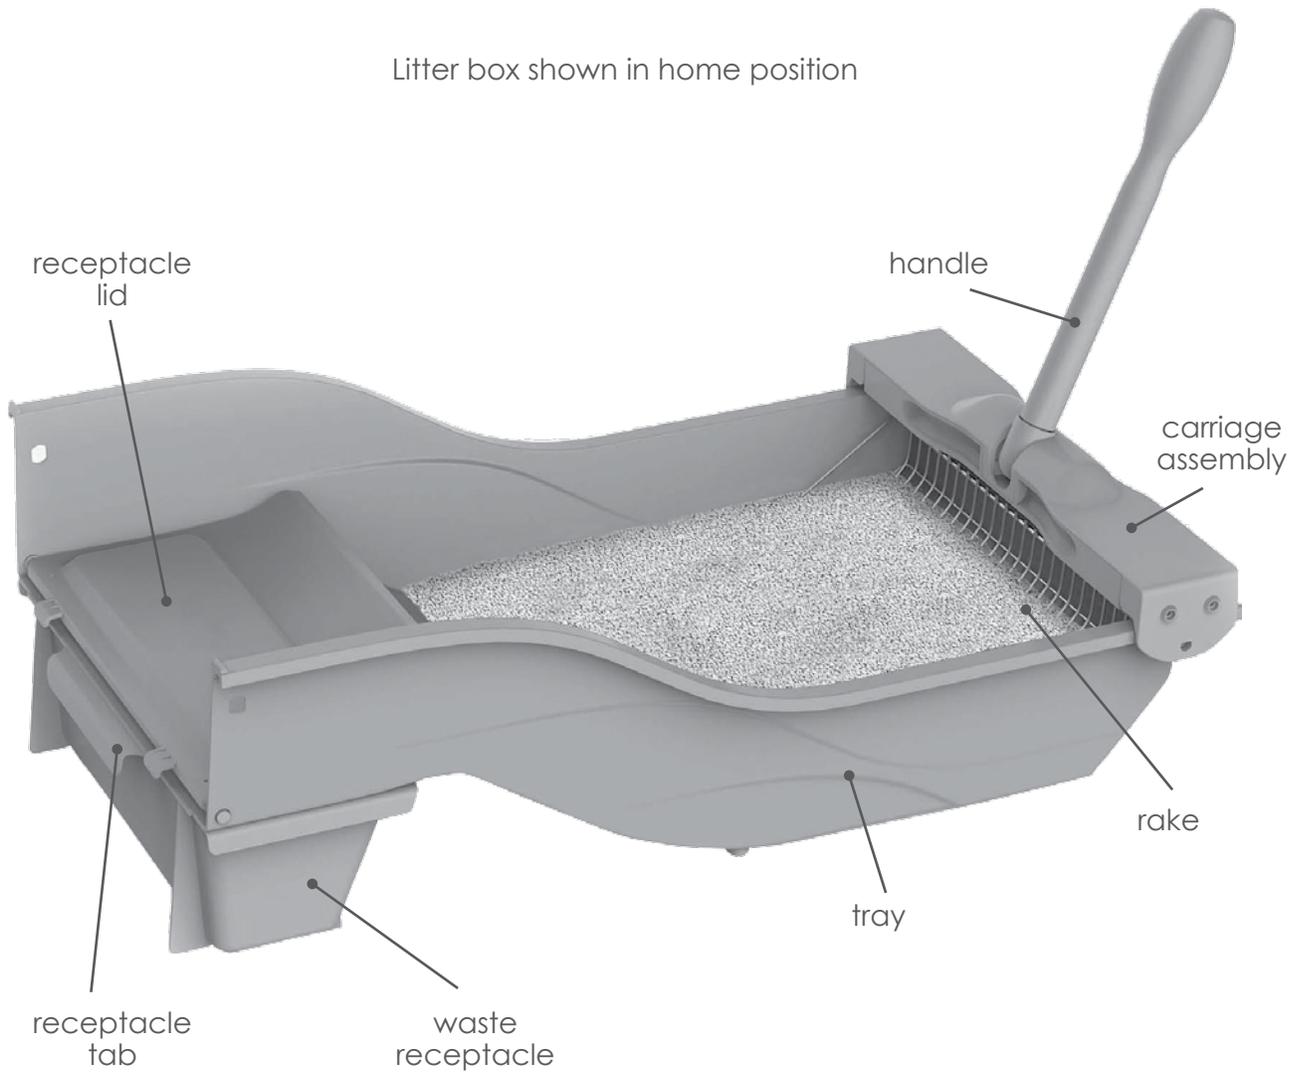

getting started

1. Remove all packaging from the product and remove the **receptacle lid** by slightly bending the **tray** outwards. Remove all contents inside the **waste receptacle**.
2. Line the **receptacle** with one of the enclosed liners and place the **waste receptacle** underneath the **tray** so it holds itself in place.
3. Open the enclosed **odor filter** and slide it into the sleeve located on the underside of the **receptacle lid**. Then install the **receptacle lid** with the **odor filter** side down by inserting the **tabs** into the holes and slightly flexing the **tray** outwards as needed. Note that the **odor filter** will immediately begin trapping odors once it is opened.
4. Install the enclosed **handle** onto the **carriage assembly** and screw in until snug.

Note: the handle connection can also be used with a standard size broom handle (see image on right). Do not leave the litter box unattended when using a handle other than the one provided. Do not leave the broom handle connected when you are not using the broom handle.

5. Place the litter box in your home. If using the product on a tile floor place the rubber grommets provided on the bottom of the **tray** to avoid sliding.
6. Add litter to the **tray** filling it up to the fill line. Do not overfill **tray**. Be sure the **carriage assembly** is positioned snugly against the back wall of the litter box and the rake is directed toward the **waste receptacle**. Ensure handle is in home position.



Shown with broom attachment

usage directions

1. To scoop the litter box, simply grab the **handle** while holding the **receptacle tab** (for balance) and pull towards you and the **waste receptacle**. The rake will automatically open the lid and place clumps into the receptacle in one easy motion. If the **carriage assembly** jams due to an oversize clump, gently rake back and forth until the clump loosens.

Note: If using a standard size broom handle, place your foot on the receptacle tab and pull the broom handle towards the waste receptacle. As the carriage assembly approaches the receptacle lift your foot to allow the receptacle lid to open.


2. After the rake pushes the clumps into the receptacle, simply push the **handle** back through the litter and into the home position. Be sure the rake rests against the back wall of the **tray** before the cat uses the litter box again.
3. Add litter as needed to maintain fill line.
4. For optimal use, rake at least once a day or more if you have multiple cats. Replace **odor filter** as needed.

to remove waste

1. Lift the **tray** and remove the **waste receptacle**.
2. Grab the drawstrings on the liner and pull. Dispose of waste and replace with a new liner.

maintenance

1. Remove the **waste receptacle**, **receptacle lid** and **handle**.
2. Slide the **carriage assembly** off of the **tray**.
3. Remove and dispose of all litter. Wash all parts with mild detergent and water. Be sure to rinse thoroughly and dry completely before adding fresh litter. It is important that all parts are completely dry before reassembling.
4. To reassemble, be sure to align the **wheels** on the **carriage assembly** with the **tray** rails to ensure the **carriage assembly** glides smoothly back and forth.

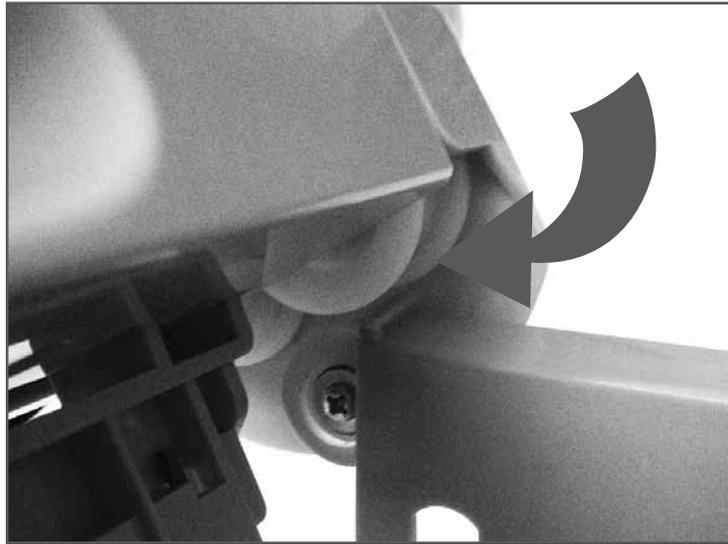

Line up the wheels with the tray rails

warranty

1 Year Limited Warranty Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty. This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty. This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on JCS's Liability? JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition. Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise. JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party. Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How to Obtain Warranty Service In the U.S.A. and Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-866-537-2249 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department.

PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.

© 2013 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions.

All rights reserved. Distributed by Sunbeam® Products, Inc. doing business as Jarden Consumer Solutions, Boca Raton, Florida 33431.

Due to constant design and quality improvements, the appliance inside may look slightly different from the picture on the box.